


IBM ThinkCentre A51 [Machine Type (M/T) 為  
8122, 8123, 8124, 8129, 8131, 8132, 8133, 8134,  
8135, 8136, 8137, 8138, 9212]

前方音訊開啟處理方式

1. 選開始內的”控制台”

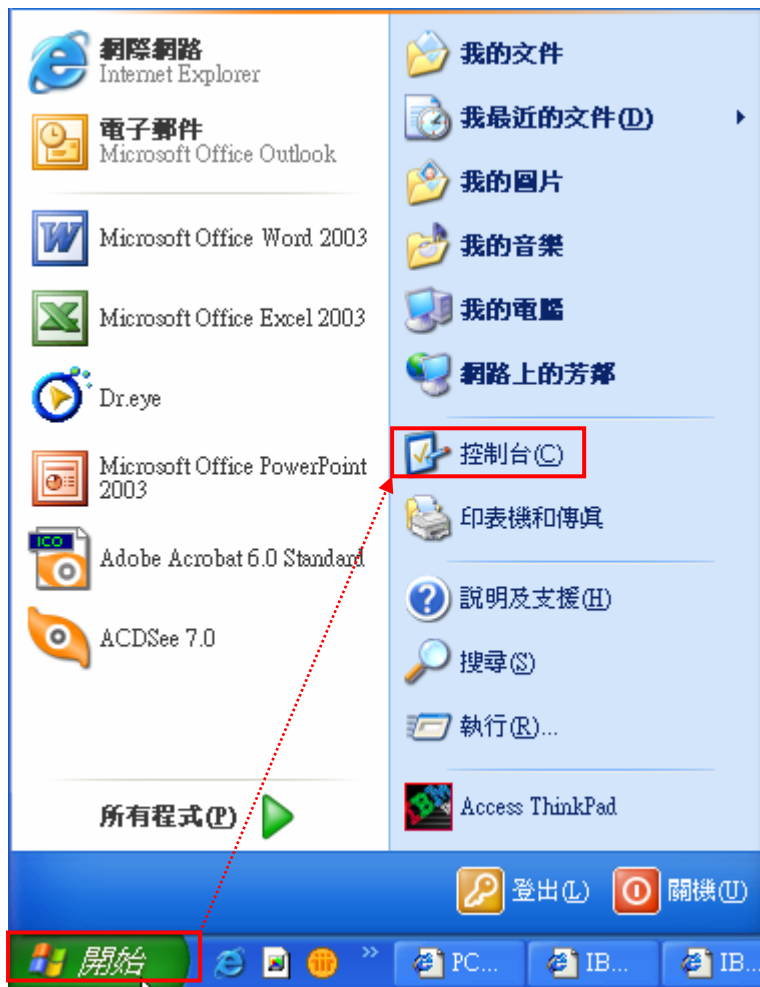


## 2.選”聲音,語音,和音訊裝置”




## 3.選”聲音及音訊裝置”




#### 4.選上方的”音訊”

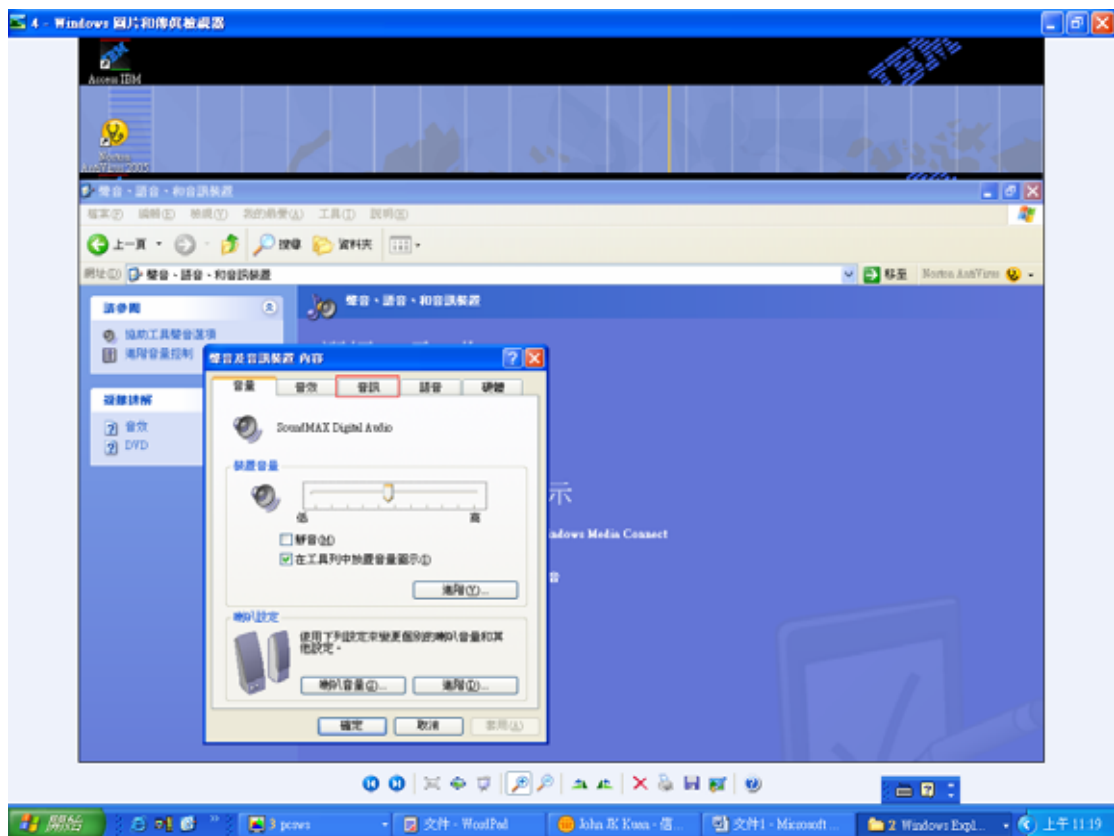


#### 5.選”音效錄音”內的”音量”

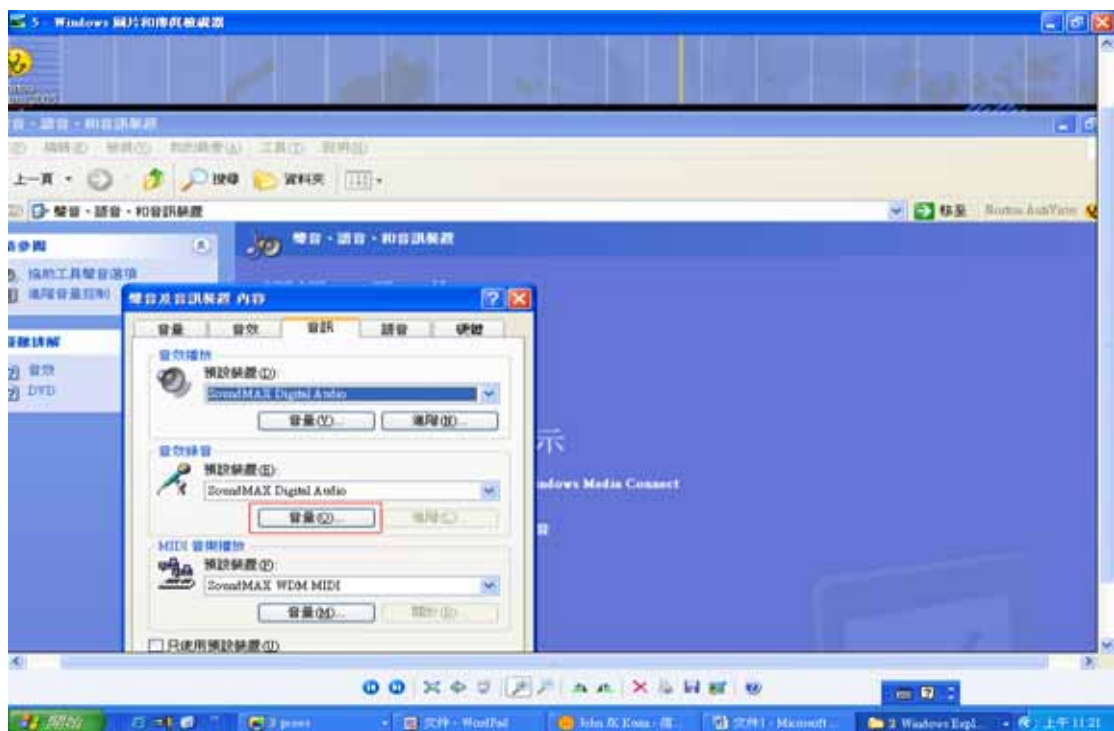

## 6.選“選項”內的“進階控制”

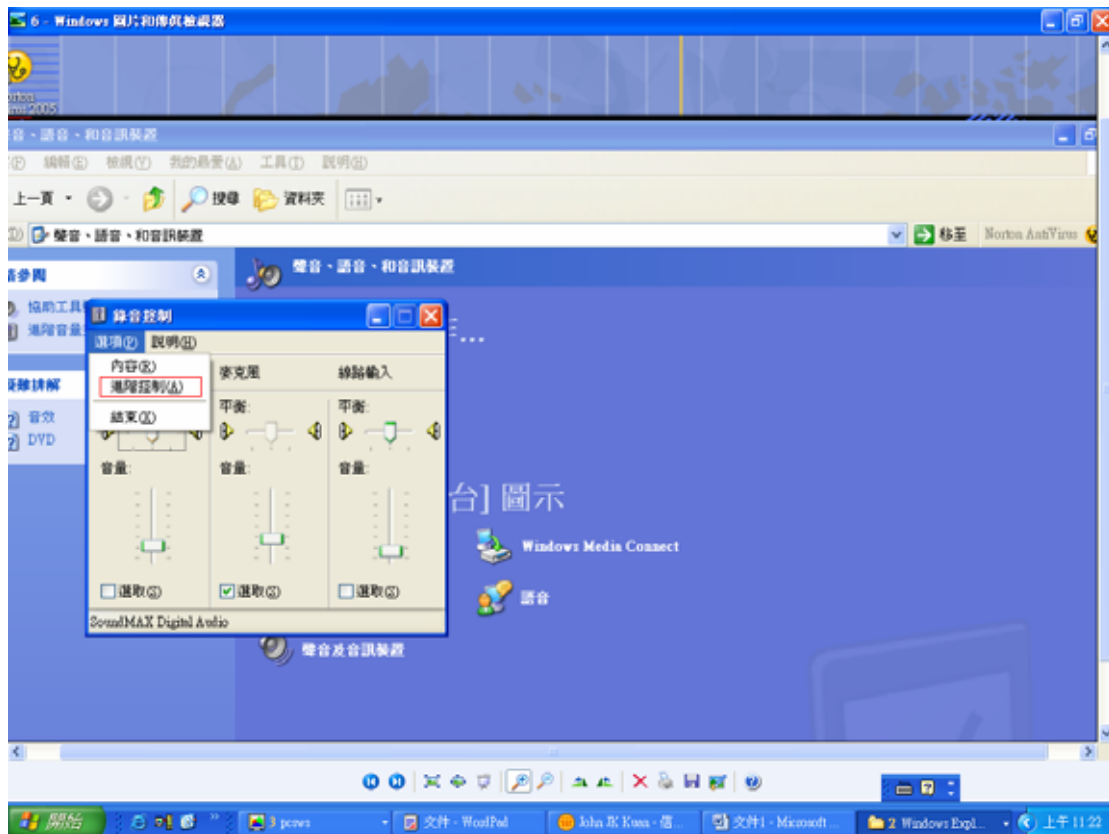

## 7.選“麥克風”下方的“進階”

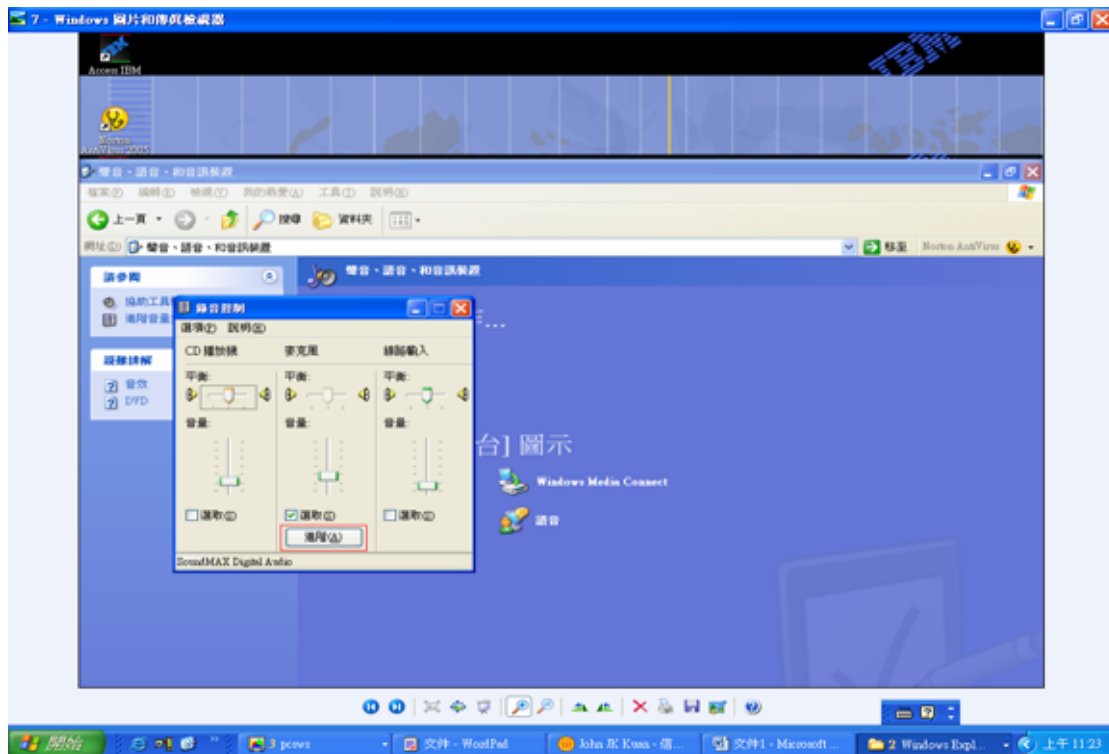

8.將”2.前面麥克風”方塊打√,既可解決前方音訊問題

